

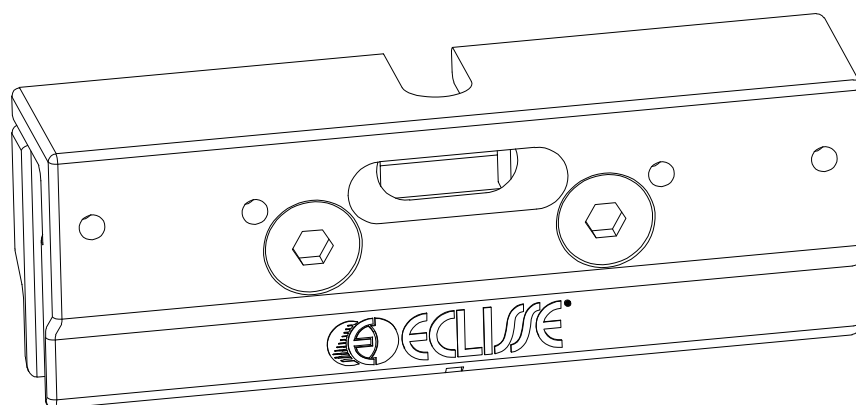
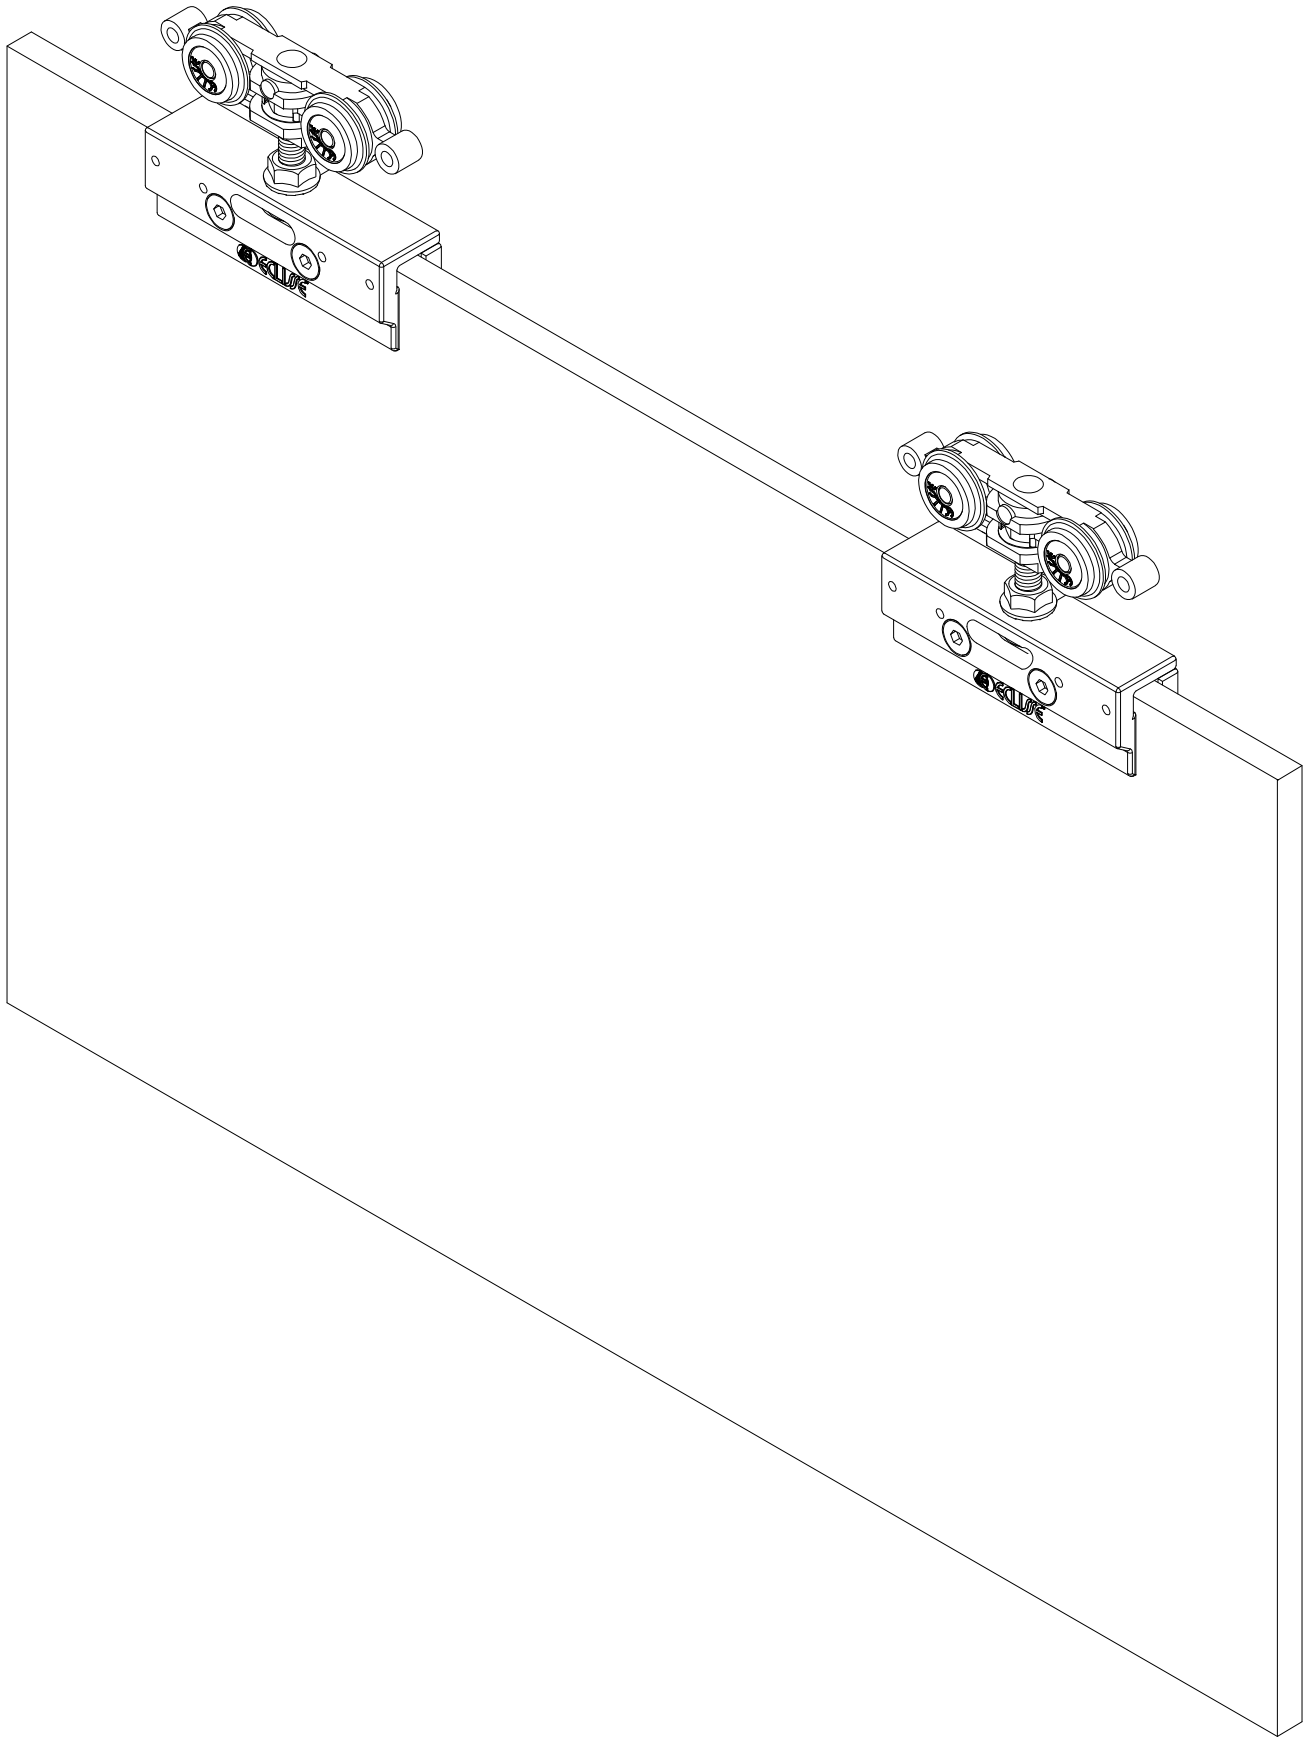
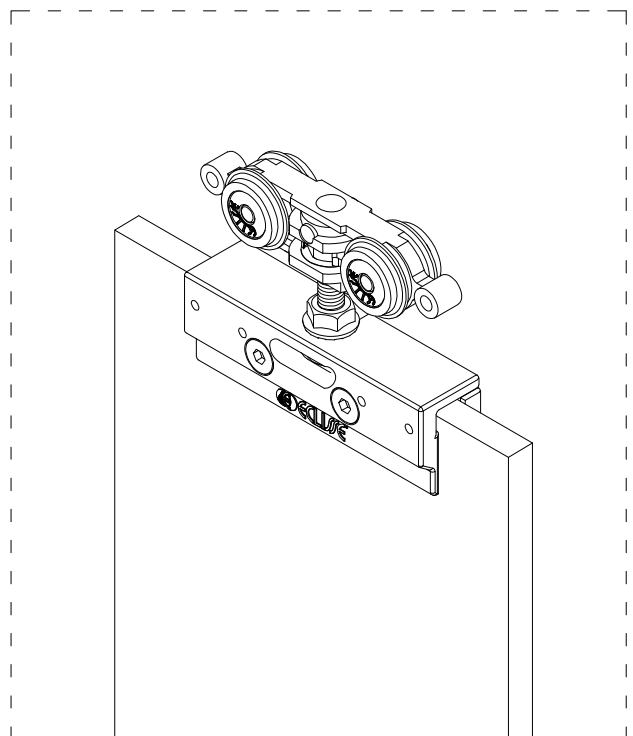


- |           |  |           |  |
|-----------|--|-----------|--|
| <b>IT</b> | STAFFE ECLISSE PER ANTE TUTTO VETRO  | <b>DE</b> | ECLISSE EINSETZBESCHLAG FÜR GANZGLASTÜR      |
| <b>GB</b> | BRACKETS FOR ALL-GLASS SLIDING DOOR  | <b>PL</b> | UCHWYTY FREZOWANE ECLISSE DO TAFLI SZKLANEJ  |
| <b>PT</b> | PINÇA OU BRAÇADEIRA ECLISSE PARA PORTAS DE CORRER EM VIDRO                         | <b>RU</b> | СКОБЫ ECLISSE ДЛЯ СТЕКЛЯННЫХ ПОЛОТЕН         |
| <b>CZ</b> | ECLISSE DRŽÁK VÝŘEZ PRO CELOSKLENĚNÉ DVEŘE   | <b>RO</b> | CLEME PENTRU CANATURI DIN STICLĂ             |
| <b>SK</b> | SVORKY ECLISSE NA UCHYTENIE CELOSKLENENÝCH POSUVNÝCH DVERÍ VYŽADUJÚCE OTVOR V SKLE | <b>SI</b> | STREME ZA DRŠNA STEKLENA VRATA               |
| <b>ES</b> | MORDAZAS PARA PUERTAS CORREDERAS TODO CRISTAL                                      | <b>HU</b> | ECLISSE ÜVEGSZORÍTÓ SZETT TELJES ÜVEGAJTÓHOZ |
| <b>NL</b> | KLEMMEN VOOR HARDGLAZEN SCHUIFDEUREN   | <b>HR</b> | DRŽAČ KLIZNIH STAKLENIH VRATA                |
| <b>FR</b> | ETRIERS POUR VANTAUX COULISSANTS TOUT VERRE  | <b>FI</b> | LASIKIINNIKKEET LASILIUKUOVILLE              |
|           |  | <b>TR</b> | ECLISSE CAM PANEL BRAKET SISTEMI             |

**10 mm**

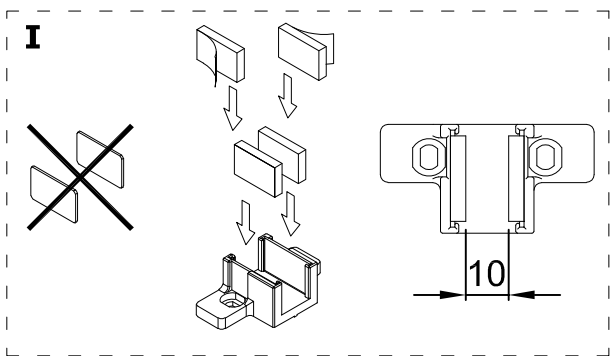

[www.eclisseworld.com](http://www.eclisseworld.com)

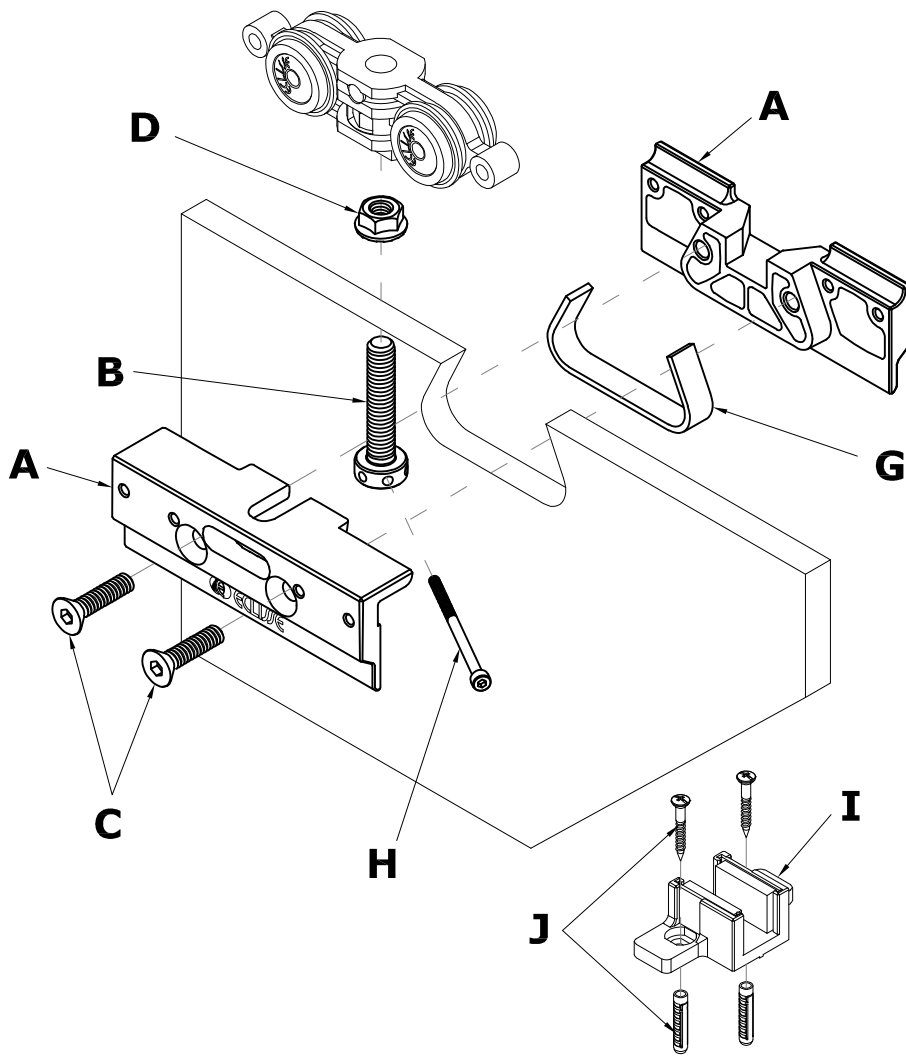


# STAFFE PER ANTE SCORREVOLI TUTTO VETRO

modello **UNICO**


modello **SYNTHESIS® LINE**

## DETERMINAZIONE DELL' ALTEZZA DELLA PORTA TUTTO VETRO

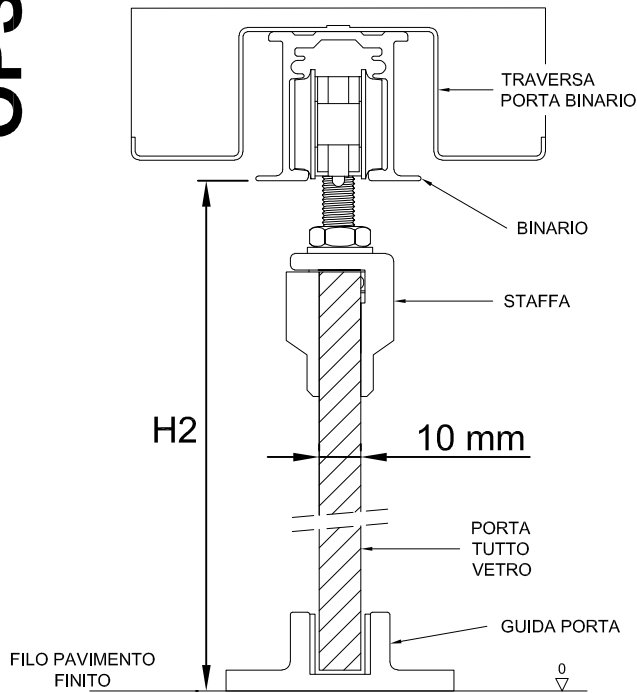

$$\text{ALTEZZA VETRO} = H2 - 25 \text{ mm}$$


"H2" è la distanza tra il pavimento finito e il filo binario di alluminio.  
Si consiglia di rilevare la quota in più punti lungo l'intera luce.

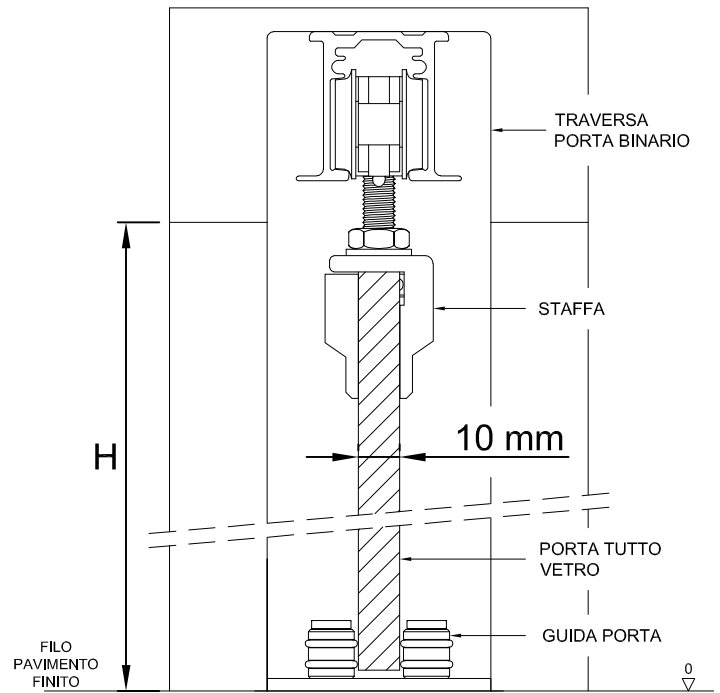


$$\text{ALTEZZA VETRO} = H - 20 \text{ mm}$$

"H" è la distanza tra il pavimento finito e il filo muro.  
Si consiglia di rilevare la quota in più punti lungo l'intera luce.


## DETERMINAZIONE DELLA LARGHEZZA DELLA PORTA TUTTO VETRO

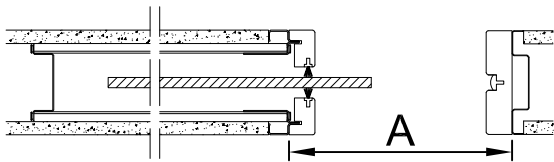


$$\text{ANTA SINGOLA} = A - 15 \text{ mm}$$

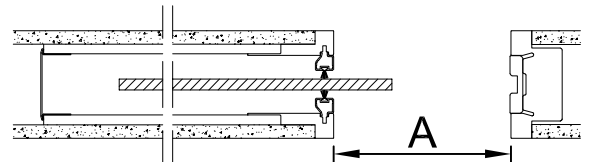

$$\text{ANTA SINGOLA} = A + 35 \text{ mm}$$

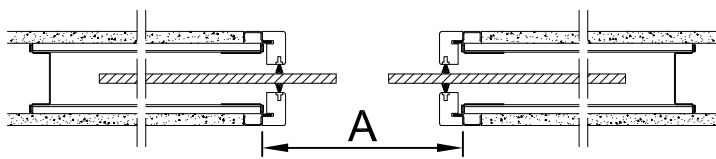



$$\text{ANTA DOPPIA} = A / 2 + 10 \text{ mm}$$

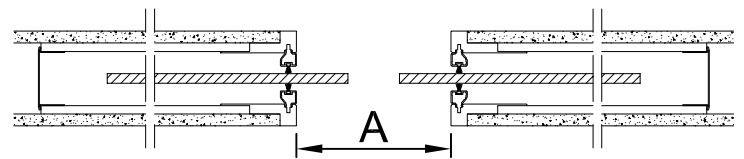


$$\text{ANTA DOPPIA} = A / 2 + 35 \text{ mm}$$

## DIMENSIONE LAVORAZIONE DA EFFETTUARE NELLA PARTE SUPERIORE DELLA PORTA SCORREVOLE TUTTO VETRO (SPESSORE 10 mm)

ANTA SINGOLA

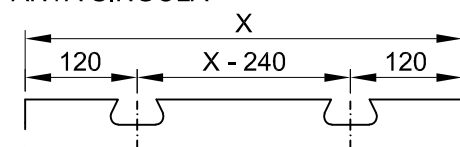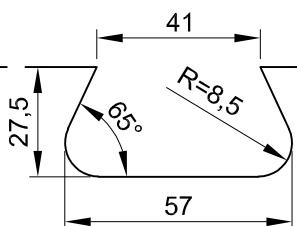

ANTA DOPPIA

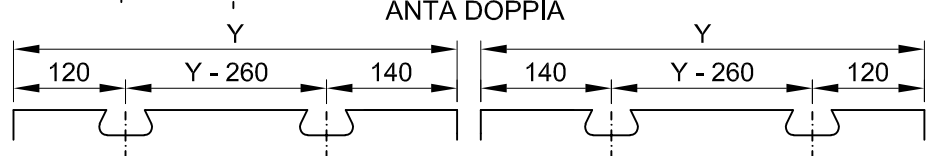

**A** - N°1 COPPIA DI STAFFE (4 PEZZI),  
**B** - N°2 PERNI M8 FORATI,  
**C** - N°4 VITI TPSEI M6,  
**D** - N°2 DADI M8,

**G** - N°2 GUARNIZIONI IN SALPA,  
**H** - N°1 CHIUDI PERNO,  
**I** - N°1 GUIDA PORTA,  
**J** - N°2 VITE CON TASSELLO,

## AVVERTENZE DI SICUREZZA ACCESSORI PER PORTE VETRO ECLISSE

Queste avvertenze sono da conservare assieme alle istruzioni di montaggio e l'utilizzo, per prevenire danni al prodotto, danni materiali o lesioni personali.

**Importante:** gli utenti devono essere informati sui punti che li riguardano nelle seguenti avvertenze e nelle istruzioni per l'uso ed il montaggio!

### Generalità

1. Eclisse srl consiglia l'utilizzo di vetro di silicato sodo-calcico di sicurezza temperato termicamente norma UNI EN 12150-1.
2. Gli accessori per vetro Eclisse non sono adatti a locali nei quali si impiegano sostanze chimiche (ad es. cloruri, Sali), come piscine, saune e bagni pubblici.
3. Le ante scorrevoli non devono essere fatte scorrere a velocità superiore al passo d'uomo e devono essere fermate manualmente prima di raggiungere il fermo porta.

### Montaggio

1. Il montaggio degli accessori per vetro deve essere eseguito esclusivamente da personale specializzato, istruito specificatamente il montaggio del vetro.
2. Prima di assemblare gli accessori controllare che i vetri non presentino scheggiature e/o spigoli rotti.
3. Durante il montaggio esiste il pericolo di schiacciamenti e di lesioni per la rottura del vetro. Si deve quindi indossare un adeguato abbigliamento e idonei dispositivi antinfortunistici (in particolare guanti e occhiali protettivi).
4. Nell'orientare gli elementi in vetro si deve tener conto delle misure dello spazio di passaggio per i relativi dispositivi. Le misure del passaggio vanno dimensionate in modo tale da non interferire e/o andare a contatto con materiali duri (ad es. vetro, metallo, calcestruzzo).
5. Il montaggio deve essere eseguito senza forzature (Non eseguire tensioni limite con eccessiva chiusura delle viti).
6. **Importante:** l'installazione degli accessori deve sempre essere accessibile per eventuali manutenzioni e/o regolazioni.
7. Dopo l'installazione controllare e, se necessario, regolare i fermi anteriori e posteriori nel binario per assicurarsi che non ci siano problemi di sicurezza.

### Manutenzione

La corretta posizione, la scorrevolezza dei dispositivi e la regolazione della porta devono essere controllati regolarmente. In particolare in caso di locali molto frequentati il controllo deve essere eseguito da un'azienda specializzata nella manutenzione o nell'installazione. I componenti in vetro danneggiati (rotti e/o scheggiati) devono essere cambiati immediatamente!

La pulizia delle superfici deve essere eseguita solo con detergenti e prodotti appropriati

N.B.: Le staffe sono progettate per ante realizzate su lastre di cristallo temperato di sicurezza da 10 mm di spessore.

PORTATA MASSIMA 100 KG

LA STAFFA ECLISSE È STATA PROGETTATA E TESTATA ESCLUSIVAMENTE SU CONTROTELAI ECLISSE. L' AZIENDA DECLINA OGNI RESPONSABILITÀ PER PROBLEMI CHE POTREBBERO SORGERE SULL' INSTALLAZIONE IN ALTRI CONTROTELAI.




**ATTENZIONE:**  
 PER IL BUON FUNZIONAMENTO  
 IN SICUREZZA RIPOSIZIONARE  
 I FERMI ALL'INTERNO DEL  
 BINARIO.

# BRACKETS FOR ALL-GLASS SLIDING DOORS

Eclisse **SINGLE/DOUBLE**


Eclisse **SYNTHESIS® LINE**

## HOW TO DETERMINE THE HEIGHT OF AN ALL-GLASS DOOR

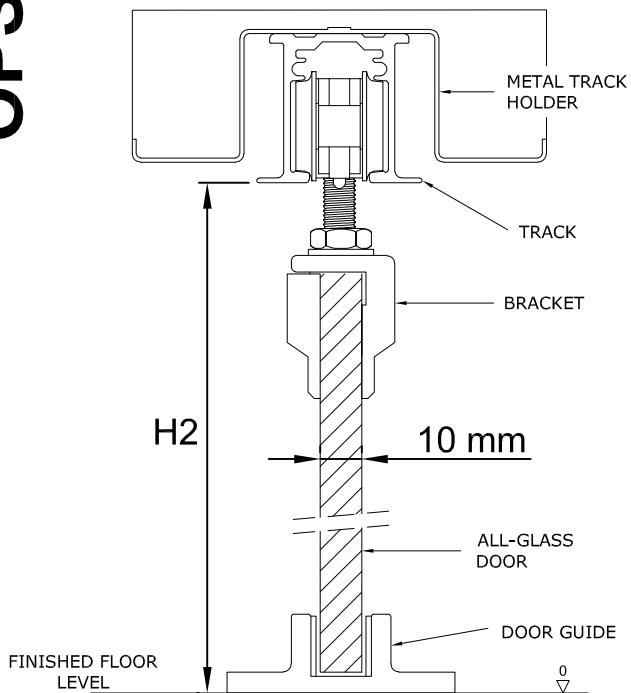

**GLASS HEIGHT = H2 - 25 mm**


"H2" is the distance between the finished floor surface and the aluminium track. We recommend measuring the height at different points of the span.

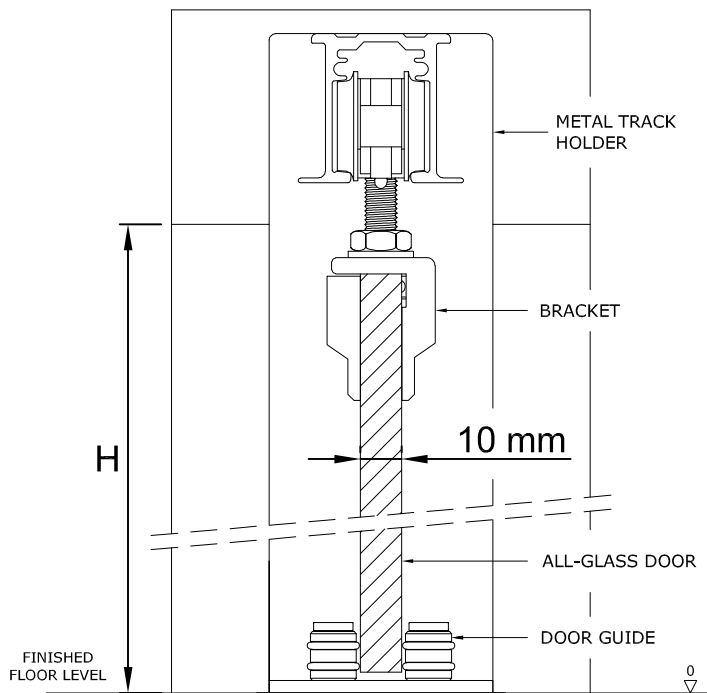


**GLASS HEIGHT = H - 20 mm**

"H" is the distance between the finished floor surface and the wall opening. We recommend measuring the height at different points of the span.


## HOW TO DETERMINE THE WIDTH OF AN ALL-GLASS DOOR

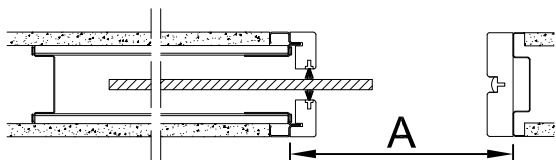


**SINGLE DOOR = A - 15 mm**

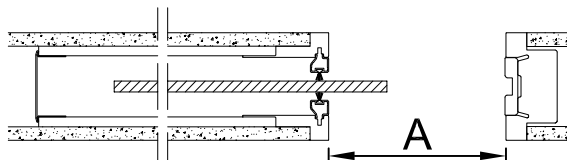

**SINGLE DOOR = A + 35 mm**

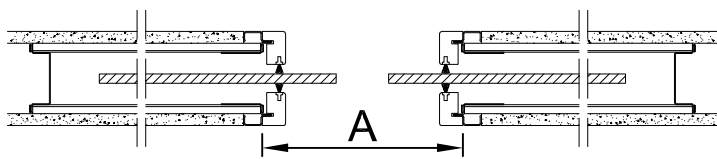


**DOUBLE DOOR = A / 2 + 10 mm**

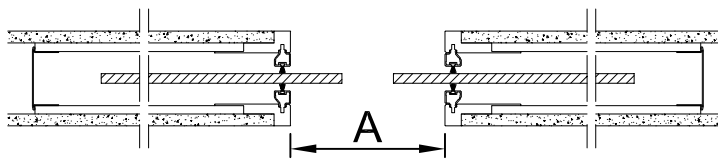



**DOUBLE DOOR = A / 2 + 35 mm**

## CUT-OUT MEASURES FOR THE UPPER PART OF ALL-GLASS DOORS (THICKNESS 10 mm)

SINGLE DOOR

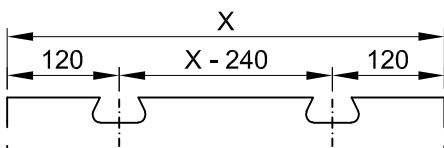

DOUBLE DOOR

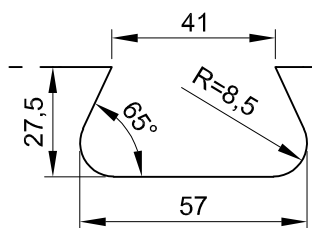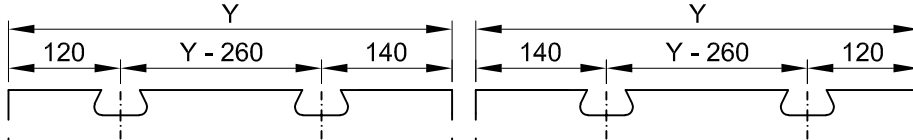

## THE PACK CONTAINS:

GB

**A** - 1 PAIR OF BRACKETS (4 PCS),  
**B** - 2 CAPSTAN BOLT M8,  
**C** - 4 TPSEI SCREWS M6,  
**D** - 2 SHORT NUTS M8,

**G** - 2 BONDED LEATHER GASKET,  
**H** - 1 ADJUSTING PIN,  
**I** - 1 DOOR GUIDE,  
**J** - 2 SCREWS AND RAWLPLUGS,

## **ECLISSE GLASS DOOR BRACKETS AND ACCESSORIES - SAFETY INFORMATION**

The following information should be kept with the instructions for installation and use, in order to prevent product damage, property damage or personal injury.

### **Important: Users should be made aware of the following important points**

#### **General**

1. Eclisse srl recommends the use of safety sodo-calcic silicate tempered glass (UNI EN 12150-1).
2. Eclisse glass accessories are not suitable for rooms in which chemical substances (eg., chlorides, salts) are employed, such as swimming pools and saunas.
3. Sliding doors should be opened and closed at a moderate speed and stopped manually as they reach the door post/opening stop.

#### **Installing**

1. Installation should be made by professional staff experienced in the use of glass.
2. The glass should be in perfect condition with no chipping or abrasions.
3. Wear suitable protective clothing (in particular gloves and protective glasses) during the assembly as there is a risk of crushing and/or injury should the glass break.
4. When installing the glass great care and attention should be given to ensure the edges do not come into contact with hard surfaces which would create a risk of chipping or other damage. We will not be responsible for any chips, damage or complete shattering of the door during installation as we have no control over this.
5. Attach the brackets using a torque of between 6 and 8 N. Excessive tightening could cause damage to the glass.
6. **Important:** Always ensure the installation is done to ensure maintenance and/or adjustments are possible.
7. After installation check and if necessary adjust the front and rear stops in the track to ensure there are no safety issues.

#### **Maintenance**

Regular monitoring by appropriately experienced persons is required, in particular the door position, the smooth running and to check for any damage to the glass. All damaged glass should be replaced immediately.

Clean the glass using warm water and a lint free cloth. More stubborn marks such as grease etc. can be removed using a cleaning alcohol finishing with warm water.


Please note that these brackets have been developed for 10 mm thick tempered security glass door panels.

MAXIMUM LOAD CAPACITY 100 KG

ECLISSE BRACKETS AND ACCESSORIES ARE MADE FOR USE ONLY WITH ECLISSE SYSTEMS. IF THEY ARE USED WITH OTHER SYSTEMS ECLISSE DO NOT ACCEPT ANY RESPONSIBILITY WHATSOEVER.



**WARNING:**  
FOR A PROPER AND SAFE  
FUNCTIONING, PLEASE  
REPOSITION THE DOOR STOPS  
IF NECESSARY.

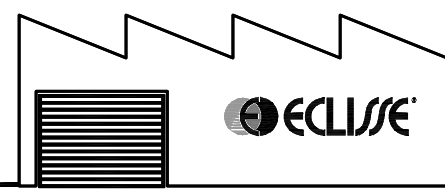

[www.eclisseworld.com/en/dealer-locator](http://www.eclisseworld.com/en/dealer-locator)

